

provision Pad TV support list

Samsung Galaxy Nexus
Samsung Galaxy SII
Samsung Galaxy SIII
Samsung Galaxy S4
Samsung Galaxy S5
Samsung Galaxy S6
Samsung Galaxy S6 edge
Samsung Galaxy Note
Samsung Galaxy Note2
Samsung Galaxy Note3
Samsung Galaxy Note4
Samsung Galaxy Note 8.0
Samsung Galaxy Note 10.1 (adapter needed)
Samsung Galaxy TAB 2 (adapter needed)
Asus Fonepad
Asus Memo Pad ME172V
Asus Nexus 7
Asus New Nexus 7
Asus PadPhone Infinity
Asus MEMO Pad
Asus Memo Pad smart 10" me301
Asus EeePad2 (TF201)
Acer ICONIA Tab A510
ARCHOS 101 XS
HTC ONE X (OS 4.1.1 above)
HTC ONE X Plus (OS 4.1.1 above)
HTC Butterfly
HTC New One
HTC ONE MAX
HTC M8
RockChip RK3066 device(OS 4.1.1 above)
Sony ARC S, LT18i
Sony Xperia Z
Sony Xperia ZL
Sony Xperia VC
Sony Xperia Z Ultra
Sony Xperia Z3 dual
sony Xperia M2
Mi 2S (OS 4.1.1 above)
Plug Impact 2
Kruger&Matz Tablet 7" model KM0793
Modecom FreeTAB 9701 HD
LG G Pro
LG G3
Huawei G7